

10,000 km Service or 6mths

- Replace engine oil
- Replace engine oil filter
- Clean/Replace air filter (20,000)
- Inspect/Replace fuel filter (40,000)
- Clean/Replace spark plugs
- Inspect water pump for leaks
- Inspect & adjust drive belts (40,000)
- Check & adjust idle speed (20,000)
- Inspect front and rear brakes
- Adjust parking brake
- Check tyre inflation & condition (incl. Spare wheel)
- Check lights alignment
- Inspect/Clean battery and terminals
- Check levels of all lubricants, fluids and coolant

30,000 km Service or 18mths

- Replace engine oil
- Replace engine oil filter
- Clean/Replace air filter (20,000)
- Inspect/Replace fuel filter (40,000)
- Clean/Replace spark plugs
- Inspect water pump for leaks
- Inspect & adjust drive belts (40,000)
- Check & adjust idle speed (20,000)
- Inspect front and rear brakes
- Adjust parking brake
- Rotate tyres
- Balance wheels
- Align wheels
- Check tyre inflation & condition (incl. Spare wheel)
- Check lights alignment
- Inspect/Clean battery and terminals
- Check levels of all lubricants, fluids and coolant

50,000 km Service or 30mths

- Replace engine oil
- Replace engine oil filter
- Clean/Replace air filter (20,000)
- Inspect/Replace fuel filter (40,000)
- Clean/Replace spark plugs
- Inspect water pump for leaks
- Inspect & adjust drive belts (40,000)
- Check & adjust idle speed (20,000)
- Inspect front and rear brakes
- Adjust parking brake
- Rotate tyres
- Balance wheels
- Align wheels
- Check tyre inflation & condition (incl. Spare wheel)
- Check lights alignment
- Inspect/Clean battery and terminals
- Check levels of all lubricants, fluids and coolant

70,000 km Service or 42mths

- Replace engine oil
- Replace engine oil filter
- Clean/Replace air filter (20,000)
- Inspect/Replace fuel filter (40,000)
- Clean/Replace spark plugs
- Inspect water pump for leaks
- Inspect & adjust drive belts (40,000)
- Check & adjust idle speed (20,000)
- Inspect front and rear brakes
- Adjust parking brake
- Rotate tyres
- Balance wheels
- Align wheels
- Check tyre inflation & condition (incl. Spare wheel)
- Check lights alignment
- Inspect/Clean battery and terminals
- Check levels of all lubricants, fluids and coolant

20,000 km Service or 12mths

- Replace engine oil
- Replace engine oil filter
- Clean injectors
- Clean/Replace air filter (20,000)
- Inspect/Adjust valve clearance
- Inspect/Replace fuel filter (40,000)
- Clean/Replace spark plugs
- Inspect distributor cap, rotor, and ignition wiring
- Inspect water pump for leaks
- Inspect & adjust drive belts (40,000)
- Check & adjust idle speed (20,000)
- Inspect/Clean PCV valve (40,000)
- Check ignition timing (40,000)
- Inspect front and rear brakes
- Adjust parking brake
- Rotate tyres
- Balance wheels
- Align wheels
- Check tyre inflation & condition (incl. Spare wheel)
- Check lights alignment
- Inspect/Clean battery and terminals
- Check levels of all lubricants, fluids and coolant

40,000 km Service or 24mths

- Replace engine oil
- Replace engine oil filter
- Clean injectors
- Clean/Replace air filter (20,000)
- Inspect/Adjust valve clearance
- Inspect/Replace fuel filter (40,000)
- Clean/Replace spark plugs
- Inspect distributor cap, rotor, and ignition wiring
- Inspect water pump for leaks
- Inspect & adjust drive belts (40,000)
- Check & adjust idle speed (20,000)
- Inspect/Clean PCV valve (40,000)
- Check ignition timing (40,000)
- Inspect blow-by filter
- Inspect EGR system
- Replace transmission fluid
- Replace front differential fluid
- Inspect front and rear brakes
- Replace brake pads
- Replace brake fluid
- Adjust parking brake
- Rotate tyres
- Balance wheels
- Align wheels
- Check tyre inflation & condition (incl. Spare wheel)
- Check lights alignment
- Inspect/Clean battery and terminals
- Check levels of all lubricants, fluids and coolant

60,000 km Service or 36mths

- Replace engine oil
- Replace engine oil filter
- Clean injectors
- Clean/Replace air filter (20,000)
- Inspect/Adjust valve clearance
- Inspect/Replace fuel filter (40,000)
- Clean/Replace spark plugs
- Inspect distributor cap, rotor, and ignition wiring
- Inspect water pump for leaks
- Inspect & adjust drive belts (40,000)
- Check & adjust idle speed (20,000)
- Replace engine coolant (80,000)
- Inspect/Clean PCV valve (40,000)
- Check ignition timing (40,000)
- Inspect front and rear brakes
- Adjust parking brake
- Rotate tyres
- Balance wheels
- Align wheels
- Check tyre inflation & condition (incl. Spare wheel)
- Check lights alignment
- Inspect/Clean battery and terminals
- Check levels of all lubricants, fluids and coolant
- Polish brake rotors

80,000 km Service or 48mths

- Replace engine oil
- Replace engine oil filter
- Clean injectors
- Clean/Replace air filter (20,000)
- Inspect/Adjust valve clearance
- Inspect/Replace fuel filter (40,000)
- Clean/Replace spark plugs
- Inspect distributor cap, rotor, and ignition wiring
- Inspect water pump for leaks
- Inspect & adjust drive belts (40,000)
- Check & adjust idle speed (20,000)
- Inspect/Clean PCV valve (40,000)
- Check ignition timing (40,000)
- Inspect blow-by filter
- Inspect EGR system
- Replace transmission fluid
- Replace front differential fluid
- Inspect front and rear brakes
- Replace brake pads
- Replace brake fluid
- Adjust parking brake
- Rotate tyres
- Balance wheels
- Align wheels
- Check tyre inflation & condition (incl. Spare wheel)
- Check lights alignment
- Inspect/Clean battery and terminals
- Check levels of all lubricants, fluids and coolant

90,000 km Service or 54mths

Replace engine oil
Replace engine oil filter
Clean/Replace air filter (20,000)
Inspect/Replace fuel filter (40,000)
Clean/Replace spark plugs
Inspect water pump for leaks
Inspect & adjust drive belts (40,000)
Check & adjust idle speed (20,000)
Inspect front and rear brakes
Adjust parking brake
Rotate tyres
Balance wheels
Align wheels
Check tyre inflation & condition (incl. Spare wheel)
Check lights alignment
Inspect/Clean battery and terminals
Check levels of all lubricants, fluids and coolant

100,000 km Service or 60mths

Replace engine oil
Replace engine oil filter
Clean injectors
Clean/Replace air filter (20,000)
Inspect/Adjust valve clearance
Inspect/Replace fuel filter (40,000)
Clean/Replace spark plugs
Inspect distributor cap, rotor, and ignition wiring
Replace timing belt
Inspect water pump for leaks
Inspect & adjust drive belts (40,000)
Check & adjust idle speed (20,000)
Replace engine coolant (80,000)
Inspect/Clean PCV valve (40,000)
Check ignition timing (40,000)
Inspect front and rear brakes
Adjust parking brake
Rotate tyres
Balance wheels
Align wheels
Check tyre inflation & condition (incl. Spare wheel)
Check lights alignment
Inspect/Clean battery and terminals
Check levels of all lubricants, fluids and coolant

110,000 km Service or 66mths

Replace engine oil
Replace engine oil filter
Clean/Replace air filter (20,000)
Inspect/Replace fuel filter (40,000)
Clean/Replace spark plugs
Inspect water pump for leaks
Inspect & adjust drive belts (40,000)
Check & adjust idle speed (20,000)
Inspect front and rear brakes
Adjust parking brake
Rotate tyres
Balance wheels
Align wheels
Check tyre inflation & condition (incl. Spare wheel)
Check lights alignment
Inspect/Clean battery and terminals
Check levels of all lubricants, fluids and coolant

120,000 km Service or 72 mths

Replace engine oil
Replace engine oil filter
Clean injectors
Clean/Replace air filter (20,000)
Inspect/Adjust valve clearance
Inspect/Replace fuel filter (40,000)
Clean/Replace spark plugs
Inspect distributor cap, rotor, and ignition wiring
Inspect water pump for leaks
Inspect & adjust drive belts (40,000)
Check & adjust idle speed (20,000)
Inspect/Clean PCV valve (40,000)
Check ignition timing (40,000)
Inspect blow-by filter
Inspect EGR system
Replace transmission fluid
Replace front differential fluid
Inspect front and rear brakes
Replace brake pads
Replace brake shoes
Replace brake fluid
Adjust parking brake
Rotate tyres
Balance wheels
Align wheels
Check tyre inflation & condition (incl. Spare wheel)
Check lights alignment
Inspect/Clean battery and terminals
Check levels of all lubricants, fluids and coolant
Polish brake rotors

Inspect & repair/replace the following items as are necessary:-

Tie rod ends
Steering gear box and boots
Suspension components
Driveshaft boots
Brake hoses and lines
Cooling system hoses and connections
Exhaust system
Fuel lines and connections
Engine mounts
Fuses
Light bulbs
Antenna
Engine oil drain plug
Door actuator
Door regulator
Thermostat (Inspected Every 10,000 Km)
Thermoswitch (Inspected Every 10,000 Km)
Radiator cap (Inspected Every 10,000 Km)
Timing belt tensioner (Inspected Every 40,000 Km)
Crankshaft seals (Inspected Every 40,000 Km)



HONDA

Maintenance Schedule

Civic 2003

CRV 2003

Stream

Fit

Accord

• These services are recommended by the manufactures.
As driving conditions are severe in Trinidad and Tobago,
other maintenance schedules may apply.
Mon - Fri : 7:30 a.m. - 5:00 p.m. • Saturday: 8:00 a.m. - 12:00 noon
Deadline time for receiving vehicles for service is 9:00 a.m.

CLASSIC
MOTORS

Classic Motors: Port of Spain 62-HONDA (62-46632)
or (Service) 624-0057
• San Fernando 652-3913 • Tobago 639-CARS (2277)
• Website: <http://www.classicmotorstt.net>
• E-Mail: classicmotors@tsit.net.tt